




Comfort AD 76 L

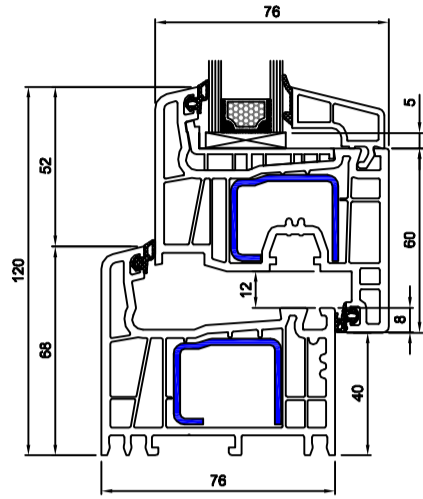


Comfort AD 76 Z 60

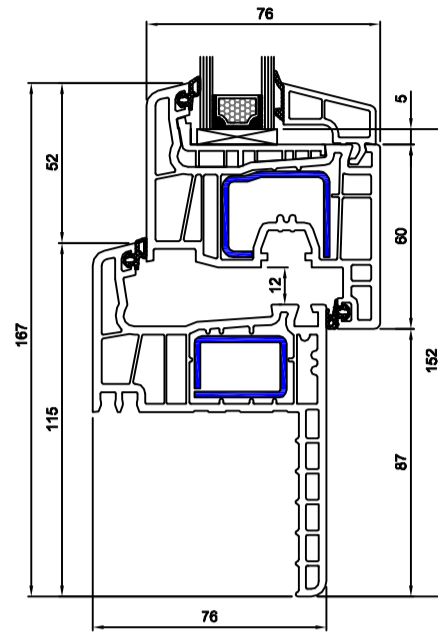


Comfort AD 76

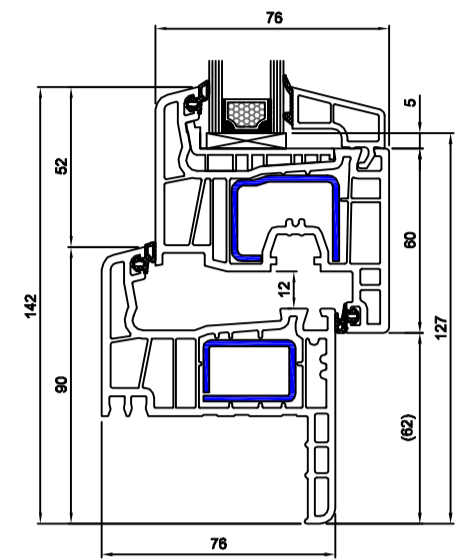


Comfort AD 82 L

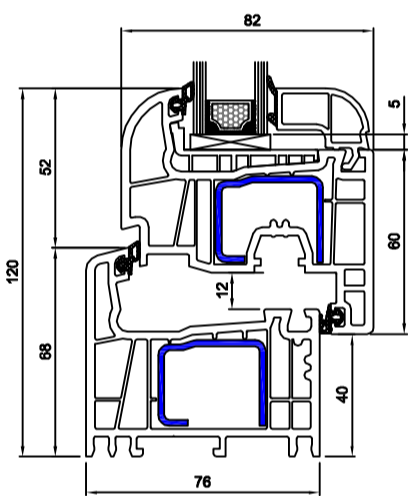


Comfort AD 82 Z 60

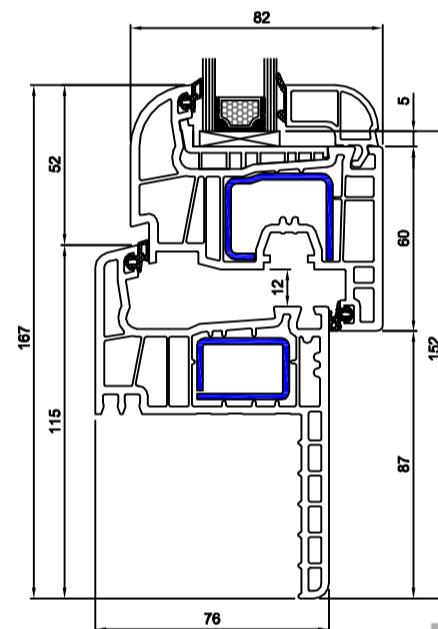


Comfort AD 82 Z 35

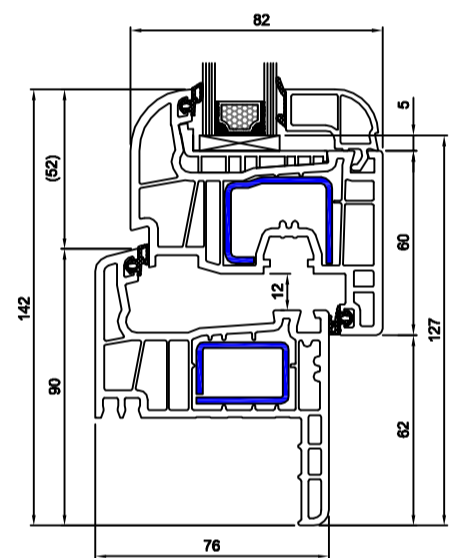

Comfort AD 76 nodo centrale

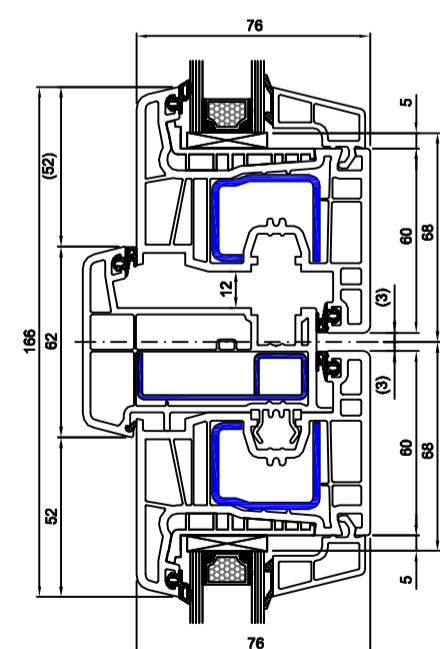

Comfort Portoncino L

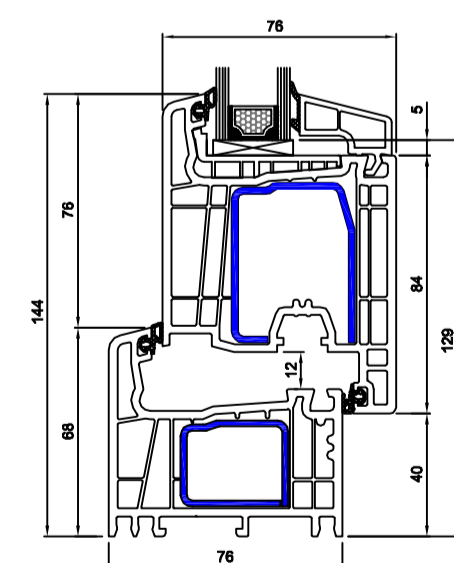

Portoncino Z 35

